

# What does it all mean !?!

## Program Mode.

Calculates shutter speed and aperture together. Only the *exposure* is automatic.

## Aperture Priority.

Use this mode to detach the subject from its background.

## Shutter Priority.

Use this mode to stop the action of a fast-moving subject.

## Manual Mode.

Control all aspects from the menus on the LCD screen.

## Full Automatic.

Point and shoot. In this mode, the choices in the MENU are limited.

## Movie Mode.

Allows you to choose a MODE for your video, such as A, S, M or P

## Color Select.

Choose B&W, sepia and other “filters” for effect.

## Two Custom Modes.

Customize a MODE you commonly use – see Instruction Book.

## Scene Selection Mode.

Choose from pre-programmed settings for food, fireworks, night scene, panorama, sports, 3-D, and many other common settings and subjects.

