


Leitz

Rapid Winder

Leicavit


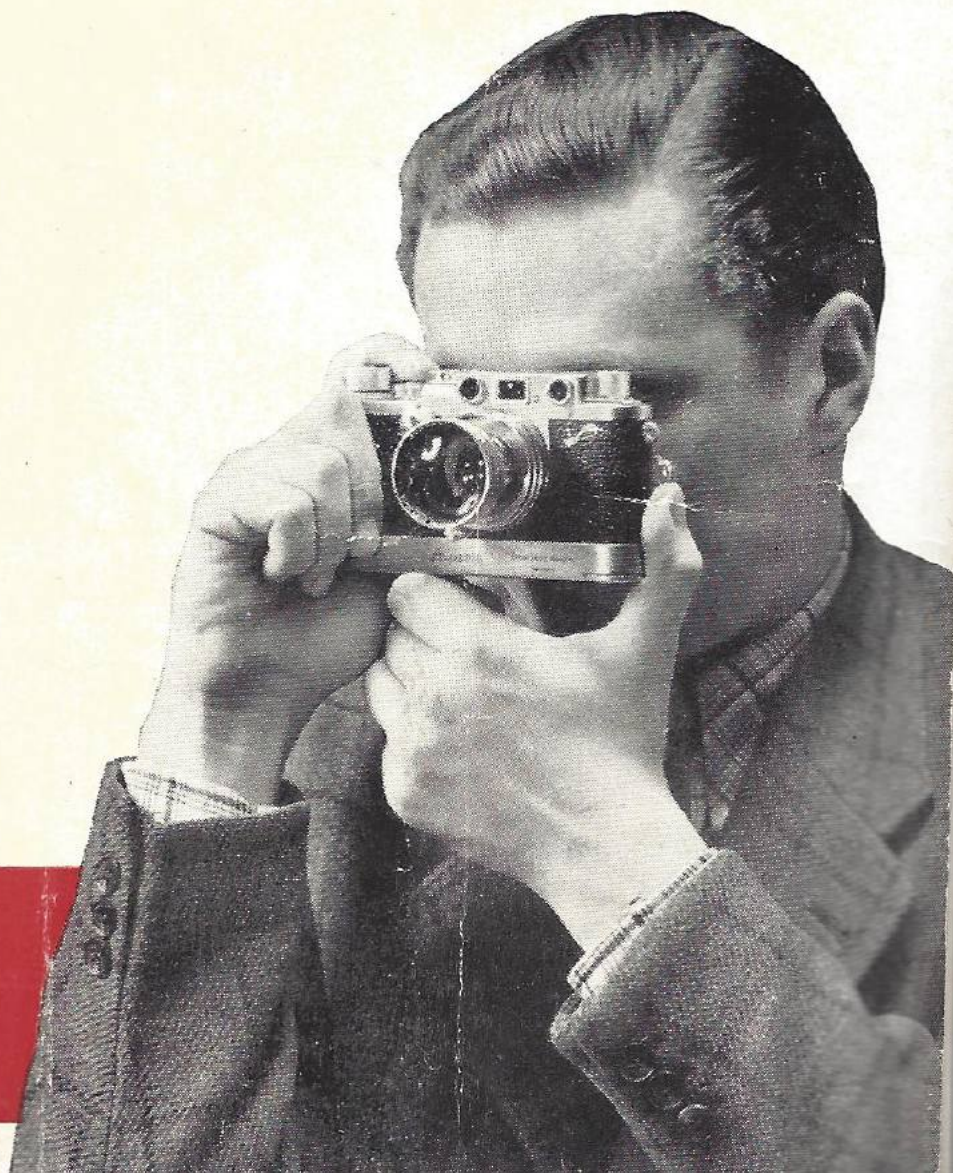




The LEICAVIT rapid winder can only be fitted to cameras with serial numbers higher than 400,000.

The rapid winder further extends the versatility of the LEICA and improves its readiness for action. With it, it is possible to record rapid movements as picture sequences at a rate of a shot a second. There is no need to lower the eye from the finder: the left hand cocks the shutter with the rapid-winding trigger while the right releases it again in quick succession.

The trigger folds flush when not in use. The LEICA can then be operated in the normal manner.

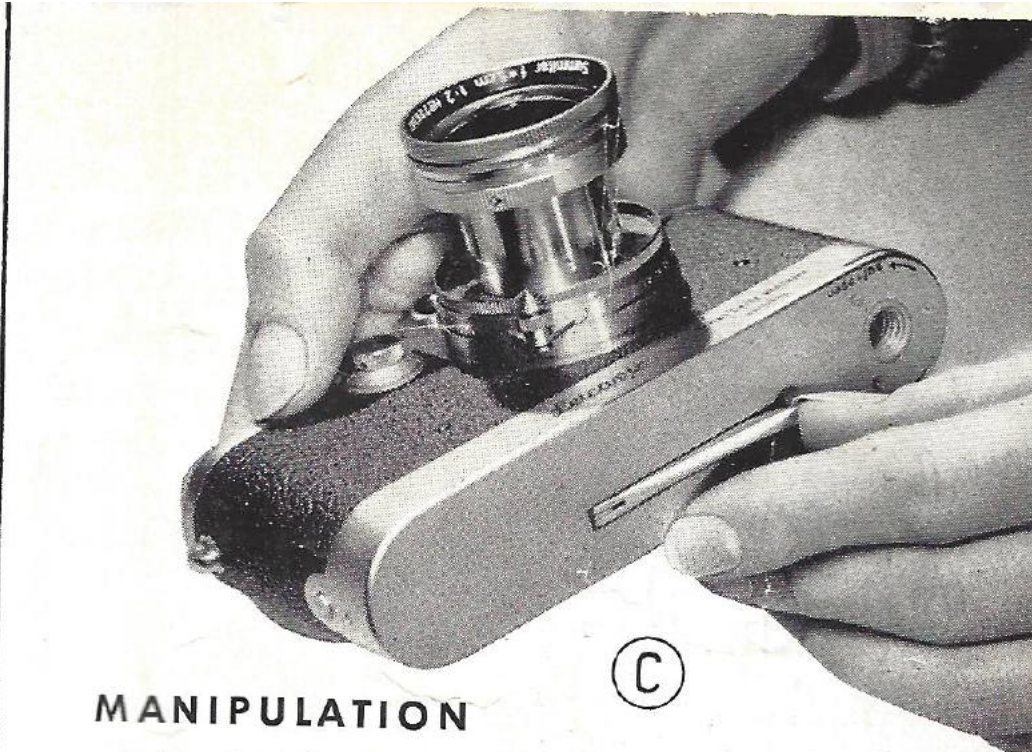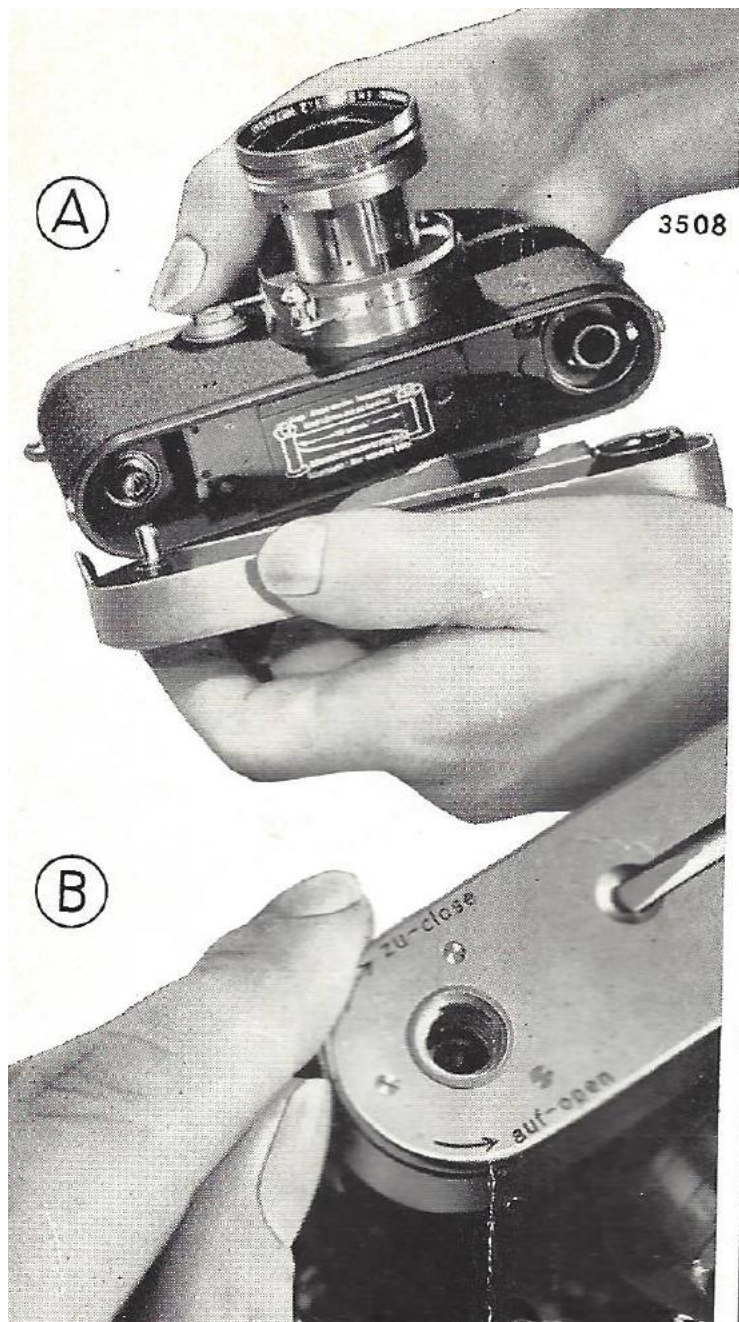

MANIPULATION

- A Attach the LEICAVIT to the body of the LEICA in the same way as, and in place of, the baseplate.
- B Secure it by moving the locking lever ① to "zu - close".
- C Swing out the trigger ②. The LEICA is now ready for sequence shooting. Depress the locking button ③ to fold the trigger flush. ④ Tripod bush.

Always pull the trigger as far as it will go, and let it spring back into its original position before depressing the release button. If the shutter is not fully wound the blinds will traverse the frame without opening. If this should happen repeat the triggering action – without pressing the release – to cock the shutter.

Pull the trigger to the left only when the finger is clear of the release button after releasing the shutter.

LEICAVIT Rapid Winder

Code: SYOOM

Ever-ready cases for the camera and rapid winder attached, with:

5 cm. ELMAR

ESOOR

5 cm. SUMMICRON (SUMMITAR) EPZOO

5 cm. SUMMARIT

EMOOX

To fit the LEICAVIT to cameras with numbers under 622251 the locking bridge under which the baseplate lock engages must be replaced by a somewhat modified part. The two fixing screws have to be removed and screwed home again to hold the new locking bridge (supplied with the rapid winder).

E R N S T L E I T Z · G M B H · W E T Z L A R

Branch Works: Ernst Leitz (Canada) Ltd., Midland/Ontario